
TABLE OF CONTENTS

1.	THE 6050X3K1 MINITRASE KIT	1-1
	Unpacking	1-1
	Cautions and Warnings.....	1-1
	Note	1-1
	MiniTrase Warranty.....	1-1
	Palm Warranty	1-1
	Not Liable for Improper Use	1-1
	General Specifications	1-2
	Palm Handheld Terminal.....	1-3
	TraseTerm Software	1-3
2.	PRINCIPLES AND TECHNIQUES OF OPERATION	2-1
	Theory.....	2-1
	The Measurement System	2-2
	The Capture Window.....	2-3
	Connector Graph Features	2-4
	Graphs Produced by Buriable Waveguides.....	2-7
	Determine Ka	2-8
	Relationship of Ka to Moisture Percentage	2-8
	Graphs on Relationship of Ka to Moisture Percentage	2-9
3.	ACQUAINT YOURSELF WITH THE PARTS	3-1
	Battery and Battery Charger.....	3-1
	Power Switch	3-1
	Serial Port.....	3-1
	Multiplexer Port	3-1
	Power Port for External Power Charger.....	3-1
	Bluetooth / Modem / Serial Output Switch	3-2
	Light Panel.....	3-2
	BNC Port	3-2
	Reset Button	3-2
	Waveguide Connector and Waveguides	3-2
	Coaxial Cable Assembly	3-4
	Note	3-4
	The Palm Handheld.....	3-4
	MiniTrase Backpack	3-4
4.	REQUIREMENTS PRIOR TO USE	4-1
	Charge Batteries.....	4-1
	Verifying Battery Charger	4-1
	Install the Palm Software on your PC.....	4-2
	TraseTerm Software	4-2
5.	AQUAINT YOURSELF WITH THE OPERATION OF THE HANDHELD TERMINAL.....	5-1
	TraseTerm Software	5-1
	Activating the Handheld Terminal	5-1
	Familiarize yourself with the TraseTerm Screens	5-3
	Waveguide Length	5-3
	Waveguide Type.....	5-4

Window Size Selection.....	5-5
Moisture Table Selection.....	5-5
Averaging	5-6
Sync Trase Time	5-6
6. USING THE MEASURE SCREEN	6-1
Making a Measurement with the Waveguide Connector.....	6-1
Zero Set	6-1
Zero Set Failure	6-2
Insert the Waveguides into the Soil	6-2
Make a Measurement	6-3
Note	6-3
Save the Reading	6-3
Tag the Reading	6-4
Store Readings/Graphs.....	6-4
Remeasure Button	6-4
View Data Button	6-4
7. USING THE TRASE STORED READINGS SCREEN	7-1
Screen Abbreviations.....	7-1
Delete Readings	7-1
Note	7-1
8. DOWNLOADING DATA.....	8-1
Downloading Data via the Palm Hotsync Method	8-1
Setting Up MiniTrase and WinTrase Software for Data Transfer.....	8-2
Note	8-2
WinTrase Software Settings	8-3
9. FIELD MEASUREMENTS - Standard Waveguide Connector	9-1
Using Standard Waveguides in Spot Measurements	9-1
Caution	9-1
Using Long Waveguides for Spot Measurements	9-1
Insertion of Waveguides in Dense Soils	9-2
Repeat Readings At The Same Location	9-5
Insertion In Containers	9-5
Caution	9-5
Special Measurement Conditions	9-5
Measurements with Long Waveguides in Wet Soils	9-5
Measurements in Saline Soils.....	9-5
10. FIELD MEASUREMENTS - USING BURIABLE WAVEGUIDES OR THE SLAMMER HEAVY-DUTY WAVEGUIDE	10-1
Inserting Buriable Waveguides	10-1
Precautions When Installing Buriable Waveguides.....	10-2
Caution	10-2
Using the Handheld Terminal	10-3
Zero Set Not Required for Buriable Waveguides.....	10-3
Making Measurements with the Slammer	10-4

Insertion of the Slammer Waveguides into the Soil.....	10-4
Note	10-4
Making a Measurement	10-5
Zero Set Required	10-5
11. CUSTOM LOOKUP (MOISTURE) TABLES	11-1
Standard Moisture Tables.....	11-1
Custom Moisture Tables	11-1
12. MULTIPLEXING	12-1
13. MAINTENANCE AND TROUBLESHOOTING	13-1
Care And Maintenance.....	13-1
MiniTrase Will Not Turn On When You Press Power Switch to ON Position	13-1
MiniTrase Will Not Zero Set	13-1
Unable to Measure Moisture	13-1
Cold Booting the MiniTrase	13-2
Parts	13-2
Accessories	13-2
Replacement Parts.....	13-3