

7. USING THE TRASE STORED READINGS SCREEN

Screen Abbreviations

In the Trase Stored Readings Screen, the readings are stored in columns. The data, once stored properly, will be listed in columnar form, in this order:

- Tag Number
- Date
- Moisture Reading value (in %)
- Ka Value

Using the stylus, you can tap on the up and down arrows next to the Home button in the terminal screen to scroll up and down the Stored Readings list (Fig. 7-1).

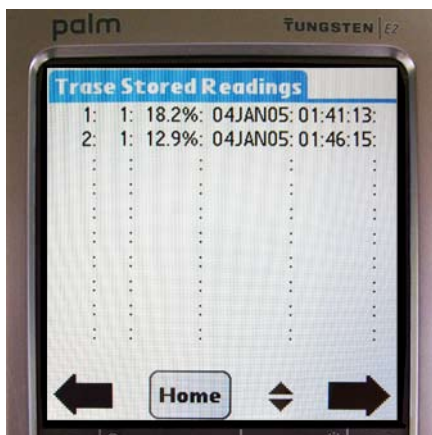


Fig. 7-1

Deleting Readings



Fig. 7-2

If, for any reason, a reading must be deleted, tap on the Drop Down Menu button on the Palm Terminal (Fig. 7-2). you can then select View, Delete, or Delete All.

View will display in order taken: the Tag, Moisture Reading, Date, time the reading was taken; and “G” if a graph was stored. Delete allows the user to delete one reading at a time; and Delete All will delete all readings listed.

Note

If either the Delete or the Delete All selections are used, the user is prompted to delete the information only from the Palm or from both the Palm and the MiniTrase as well.